

Instructional Station How-To

1. To start up Projector press **Power** on the **Projector Remote** connected to the desk.
2. Select the appropriate Source by pressing either **Computer** or **Video**.
3. Lower the screen using the **switch** on the Right Side of the Chalk Board.

For the Video or Elmo Document Camera

1. Press the **Video** button on the Projector Remote, until you select **Composite Video**.
2. Press **Power** on either the VCR or the Elmo Document Camera.
3. On the **Video Switcher** on the right of the Elmo Press **Ch. 1 for VCR. Ch.2 for the Elmo**.

For the Computer:

1. Press the **Computer** button on the Projector Remote.
2. Power on the Computer and enter in the appropriate Login Information as **posted on the computer monitor**.

To Shut Down the System:

Simply press **Power** on the Projector Remote.